

JJC ES-628 Series Wireless Remote Controller

JJC



JJC



JJC



JJC



JJC ES-628 Wireless Remote Controller is designed for CANON, NIKON, SONY, PENTAX, SAMSUNG and other brands of cameras with a remote shutter socket. The remote controller allows you to control the camera from afar when shooting, so it also prevents camera shaking. The unit includes three parts: transmitter, receiver and a connecting cable. It powers easily. The receiver is powered by two AAA lithium batteries and the transmitter is powered by a piece of CR2032 battery. The ES-628 controller can trigger the camera shutter at five modes: single shot, unlimited continuous shots, bulb shot, 3 continuous shots and 5 seconds delay shot. What's more, ES-628 transmitter is able to fire multiple receivers at the same time, so you can control more than one camera to take photos simultaneously. In addition, the receiver itself with the connecting cable can be used as a wired remote switch. The transmitter and receiver can be paired easily by any one of 16,000,000 channels through smart code. This system works at a 2.4Ghz frequency allowing the transmitter to trigger the receiver and then your camera shutter

without direct line of sight up to 100 meters. The receiver has a universal 1/4"-20 tripod mount socket on the bottom, so you can even mount it onto a tripod. All these features make it your best partner when you take photos.

Package Contents

- ES-628 transmitter x 1
- ES-628 receiver x 1
- AAA battery x 2
- CR2032 battery x 1
- Connecting cord x 1
- This instruction manual x 1
- Warranty card x 1

Product Highlights

- Compatible with different brands of cameras by replacing the connecting cable
- The transmitter and receiver can be paired easily by any one of 16,000,000 channels through smart code
- Works at a frequency of 2.4Ghz
- Allows the transmitter to trigger the receiver without direct line of sight up to 100 meters
- Can trigger the camera shutter at five modes: single shot, unlimited continuous shots, bulb shot, 3 continuous shots and 5 seconds delay shot
- The receiver can be mounted onto a tripod
- One transmitter is able to fire multiple receivers at the same time
- The receiver itself with the connecting cable can be used as a wired remote switch
- Prevent camera shaking
- Useful when shooting subjects that are difficult to get close to

Compatibility List

ES-628C1 (With CABLE-A) replacing Canon RS-80N3/TC-80N3 compatible with the following cameras

7D MARK II	EOS 5D Mark III	EOS 5D	EOS 1D	EOS 1D Mark II
EOS 1Ds	EOS 1Ds Mark II	EOS 30D	EOS 20D	EOS 10D
EOS D60	EOS D30	EOS 40D	EOS 5D	EOS 1V
EOS 3	EOS D2000	EOS 1D Mark III	EOS 50D	EOS 5D Mark II
EOS 7D	EOS 1D Mark IV	EOS 20Da	EOS 6D	EOS-1D C
EOS-1D Mark II N	EOS-1D X	5DS R	5DS	

ES-628C2 (With CABLE-C) replacing Canon RS-60E3, Pentax CS-205

compatible with the following cameras

Canon	SX50 HS	SX60 HS	G1X MARK II	100D	Rebel SL1
	70D	Power Shot G16	EOS Rebel T5i	EOS 700D	EOS Kiss X7i
	EOS 60Da				
	EOS Digital Rebel	EOS Digital Rebel XT	EOS Digital Rebel XSi	EOS KISS X2	EOS 450D
	EOS Digital Rebel XTi	Kiss Digital	Kiss Digital N	ELAN 7N	ELAN II
	ELAN DATE	ELAN 7	ELAN 7NE	ELAN 7N	ELAN IIE
	Rebel 2000	Rebel G	Rebel T2	Rebel T5	EOS1200D
	Rebel Ti	Rebel X	Rebel XS	EOS 1000D	EOS 500D
	Rebel T1i	EOS 550D	Rebel T2i	G10	G11
	G12	G1 X	60D	600D	Rebel T3i
	Kiss X5	1100D	Rebel T3	650D	Rebel T4i
	Kiss X6	Kiss X70	760D	T6s	750D
	T6i	EOS 8000D	Kiss X8i		
Pentax	K100D Super	645D	K-50	645Z	K5II
	K-5IIs	K3	K100D	K110D	K10D
	ist DS2	K200D	K20D	K7	
	ist D	ist Ds	ist	ist DL	MZ-6
	ZX-L	MZ-L	ist DL2	K5	K30

ES-628N1 (With CABLE-B) replacing Nikon MC-30/MC-36/MC-30A

compatible with the following cameras

D810	D4s	D2H	D1x	D1h
D1	D2x	D100	D200	F5
D2Xs	D3	D3s	D3x	D4
D300	D300s	D700	D800	F6
F100	F90	F90x		

ES-628N3 (With CABLE-M) replacing Nikon MC-DC2

compatible with the following cameras

D750	D5200	D3300	Df	P7800
P7700	D90	D3100	D3200	D5000
D5100	D5300	D7100	D7000	D610
D600	D7200	D5500		

ES-62802 (With CABLE-J) replacing OLYMPUS RM-UC1

compatible with the following cameras

OM-D E-M5 II	E-PL6	E-PL7	STYLUS SH-1	OM-D E-M10
OM-D E-M1	OM-D E-M5	E-P5	STYLUS 1	SP-510 UZ
SP-550 UZ	SP-560 UZ	SP-565 UZ	SP-570 UZ	SP-590 UZ
E400	E410	E420	E450	E510
E520	E600	E620	E30	E-P1
E-P2	E-PL2	XZ-1		

ES-628P1 (With CABLE-D) replacing Panasonic DMW-RS1/RSL1, Leica CR-D1

compatible with the following cameras

Panasonic	DMC- FZ1000	DMC-GH4	DMC-GX7	DMC- FZ100
	DMC-GH3	DMC- FZ200	DMC-FZ20	DMC- FZ150
	DMC-FZ20k	DMC-FZ20S	DMC-FZ30	DMC-FZ30K
	DMC-FZ30S	DMC-FZ50K	DMC-FZ50S	DMC-FZ50
	LC-1	L1	DIGILUX 2	DIGILUX 3
	L-10	DMC-G1	DMC-GH1	DMC-GF1
	DMC-G2	DMC-G3	DMC-G10	DMC-GH2
	DMC-G5			
Leica	DIGILUX3	DIGILUX2	V-LUX1	V-LUX2

ES-628S1 (With CABLE-F) replacing Sony RM-S1AM/RM-S1LM

compatible with the following cameras

A77II	A99	A57	A35	A33
A37	A100	A200	A300	A900
A350	A450	A500	A550	A900
A560	A580	A700	A850	A900
A77				

ES-628S2 (With CABLE-F2) replacing Sony Multi Connector

compatible with the following cameras

A5100	HX60V	A58	A7	A7R
A7S	A3000	A5000	A6000	HX300
HX50V	RX100II	RX100III	NEX-3NL	A7 MARK II
A3500				

ES-628F1 (With CABLE-K) replacing Fujifilm RR-80

compatible with the following cameras

FinePix S100FS	FinePix S9000	FinePix S9100	FinePix S9500	FinePix S9600
FinePix IS-1	S20	FinePix S205EXR	FinePix S200EXR	FinePix HS20EXR
FinePix HS22EXR	FinePix HS28EXR	FinePix HS25EXR	FinePix HS33EXR	FinePix HS30EXR
X-E1	X-S1	FinePix HS35EXR		

ES-628F2 (With CABLE-O)

compatible with the following cameras

FINEPIX HS50EXR		
-----------------	--	--

ES-628F3 (With CABLE-R) replacing Fujifilm RR-90

compatible with the following cameras

X30	X100T	X-T1	X-E2	FinePix S1
X-M1	X-A1	XQ1	X-A2	XQ2

ES-628I2 (With CABLE-I2) replacing Sigma CR-31

compatible with the following cameras

dp1 Quattro	dp2 Quattro	dp3 Quattro
-------------	-------------	-------------

ES-628NX (With CABLE-N) replacing Samsung ED-SR2NX02

compatible with the following cameras

NX300M	NX200	NXF1	NX1	NX2000
NX MINI	Galaxy NX	NX30	NX1100	EX2F
NX300	NX1000	NX20	NX210	