Godox 神牛

LED摄影灯



深圳市神牛摄影器材有限公司

GODOX Photo Equipment Co., Ltd.

地址/Add: 深圳市宝安区福永镇福洲大道西新和村华发工业园A4栋 Building A4, Xinhe Huafa Industrial Zone, Fuzhou RD West, Fuyong Town, Baoan District, Shenzhen 518103, China

电话/Tel: +86-755-29609320(8062) 传真/Fax: +86-755-25723423

邮箱/E-mail: godox@godox.com

Instruction manual | 说明手册 Chinese English Bilingual | 中英文双语

705-LED170-07

型号: LED126/LED170

5.滤色片更换

- 用手轻轻按住滤色片(02)向右推。
- 听到"咔"声后,抽出滤色片(02)。
- 将新滤色片直接插入,向左推移,听到"咔"声后表示锁紧,更换完毕。



五、产品参数

产品型号	LED126	LED170	
7 阳至 5	LLD120	-	
灯珠数量	126个	26个 170个	
电池供电	6*AA电池	8*AA电池	
DC电源供电	6~9V	6~12V	
功率	<7.5W	<10W	
亮度	>2200Lux (0.5 米)	>2700Lux (0.5 米)	
锂电池供电	SONY: NP-F970 (数码摄像机/相机充电电池)		
色温	5500~6500K		
调光方式	无级调光		
使用时长(以碱性电池为参考)	约1小时		
色片	柔光片、黄色滤色片各1张		
工作环境温度	-10~55度		
产品尺寸(不包含转轴尺寸)	143*96.5*42.5mm	172*108.6*42.5mm	
净重	280g	350g	

^{*}设计和规格如有变更, 恕不另行通知。

Foreword:

Thank you for purchasing this Godox Product!

This LED video light is excellent for macrophotography, product shooting, photojournalistic and video recording, etc. This lightweight and portable light provides high brightness and accurate color temperature. It comes with a diffusion filter and a yellow filter, and also supports multiple power supply modes. You can flexibly control the light brightness by using the dimmer and change the illumination direction by using the angle adjusting knobs.


▲ Warning:

- Always keep this product dry. Do not use in rain or in damp conditions.
- Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ▲ Keep out of reach of children.
- As this product do not have waterproof function, please take measures of waterproof in rainy or damp environment.
- ▲ Do not use or store the product if the ambient temperature reads over 50°C
- ▲ Do not use the flash unit in the presence of flammable gases, chemicals and other similar materials. In certain circumstance, these materials may be sensitive to the strong light emitting from this flash unit and fire or electromagnetic interference may result.
- ▲ Observe precautions when handling batteries
 - Do not put batteries into a fire or apply direct heat to them.
 - Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove batteries when the product is not used for a long time or when batteries run out of charge.
 - Should liquid from the batteries come into contact with skin or clothing, rinse immediately with fresh water.

Parts:

- 01. LED Beads
- 02. Color Filters
- 03. Power Switch
- 04. Brightness Controller
- 05. Battery Level Indicator
- 06. DC Power Jack
- 07. Battery Compartment Lock

- 08. Battery Compartment
- 09. Lithium Battery Container
- 10. Angle Adjusting Knob A
- 11. Angle Adjusting Knob B
- 12. Locking Ring
- 13. Camera Hotshoe Connection
- 14. 1/4" Bracket Mounting Hole

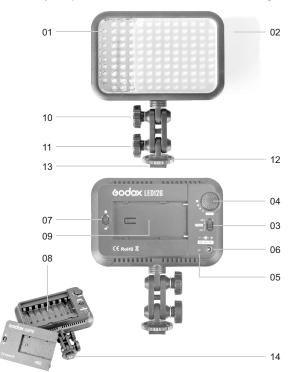


Installation and Operation

1.Power Supply

 Three power supply modes are available:







Using lithium battery: This light uses SONY NP-F970 model lithium battery.

- * When using AA batteries or lithium battery, the Battery Level Indicator (05) turns green, meaning battery power is sufficient. When the indicator turns red, the battery power is low.
- * When the indicator turns red and blinks, the lithium battery power is low. Please recharge it immediately before use in order to avoid forceful auto off.
- * When using DC power supply, the indicator shows green.



Using DC power jack: This light can be powered by DC power supply. Use an adapter (purchased separately) to connect the light with the AC power supply. LED126 uses a 6V-9V adapter and LED170 uses a 6-12V adapter.

2.Installing the Video Light

- Screw the Locking Ring (12) to the highest point and insert the Camera Hotshoe Connection (13) horizontally into the hotshoe of a camera or a camcorder.
- Tighten the Locking Ring (12).

Note: If your camcorder has no hotshoe connection, you are advised to purchase a connecting bracket for camcorder. The video light has a 1/4" Bracket Mounting Hole as your camcorder does. Therefore, you can easily connect both the light and the camcorder to the bracket.



3. Using the Video Light



Turn the Battery Compartment Lock (07) down and at the same time push the Battery Compartment (08) to the left and open it.



Install AA batteries according to indications in the compartment and then lock it.



Switch the power on, the video light giving out light.



Turn the Brightness Controller (04) to adjust the brightness.



By operating the Angle Adjusting Knob A and B, you can change the LED illumination direction.



Instead of AA batteries, the light can be powered by DC power supply. Use an adapter (purchased separately) to connect the light with the AC power supply. LED126 uses a 6V-9V adapter and LED170 uses a 6-12V adapter.

• After using the light, please power it off.

4. Using Lithium Battery

- Turn the Power Switch (03) off.
- Target the socket of the lithium battery towards the "+""-" contacts of the Lithium Battery Container (09). Push the battery in until it locks.
- Power the light on.
- After using the light, please power it off.

5.Replacing A Color Filter

- Slightly press the color filter (02) and push it to the right at the same time.
- Pull the color filter out after hearing a click sound.
- Insert a new color filter in and push it to the left.
 With a click sound, the color filter is securely in position.





Technical Data:

Model	LED126	LED170
LED Beads Quantity	126	170
Battery	6*AA	8*AA
DC Power Supply	6-9V	6-12V
Power (Max.)	<7.5W	<10W
Brightness	>2200Lux (0.5m)	>2700Lux (0.5m)
Lithium Battery	Sony NP-F970 model camera or camcorder	
	lithium-ion battery	
Color Temperature	5500-6500K	
Brightness Control	Steplessly	
Battery Life (with alkaline batteries)	Approx. 1 hour	
Color Filters	Includes a diffusion filter and a yellow filter	
Operation Temperature	-10~55 °C	
Dimension	143*96.5*42.5mm	172*108.6*42.5mm
Net weight	280g	350g

^{*} Product design and specifications are subject to change without notice.