

Compatibility of FC Series Off Camera Hot Shoe Cord

Model	Compatible Cameras	Compatible Flashes
FC-E3	All Canon EOS cameras, except D2000 / EOS 630 / EOS RT / EOS M10	Canon flashes, such as 600EX II-RT, 600EX-RT, 430EX III-RT, 430EX II, 430EX, 270EX II, 270EX, MR-14EX II, MR-14EX, MT-24EX, 320EX, 90EX, 550EX, 580EX II, 580EX, 420EX and other brands of flashes can work with Canon E-TTL or E-TTL II
FC-N3A	Nikon D series DSLR cameras	Nikon flashes, such as SB-5000, SB-800, SB-910, SB-900, SB-800, SB-700, SB-600, SB-400, SB-80DX, SB-28DX, SB-28, SB-27, SB-26, SB-25, SB-24, SB-22 and other brands of flashes can work with Nikon TTL
FC-P3	Pentax K series cameras	Pentax flashes, such as AF160FC, AF540FGZ II, AF540FGZ, AF360FGZ II, AF360FGZ, AF200FG and other brands of flashes can work with Pentax TTL
FC-NX	Samsung cameras, such as NX, NX11, NX20, NX1100, NX1000	Samsung flashes can work with Samsung TTL
FC-O3	<p>Olympus DSLR and Mirrorless cameras can work with Olympus TTL, such as OM-D E-M1 Mark II, OM-D E-M10 Mark II, PEN-F, OM-D E-M5 Mark II, PEN, E-PL8, E-P1, E-P2, E-620, E-550, E-520, E-3, E-1, E-510, E-500, E-420, E-410, E-400, E-100, E330, E-300</p> <p>Panasonic cameras can work with Panasonic TTL, such as DC-GH5, DMC-GX85, DC-FZ80, DMC-FZ1000, DMC-GH4, DMC-G7, DMC-FZ300, DMC-FZ2500, DMC-FZ50, DMC-FZ50K, DMC-FZ50S, DMC-FZ30, DMC-FZ30K, DMC-FZ30S, DMC-FZ20, DMC-FZ20K, DMC-FZ20S, LC-1</p>	<p>Olympus flashes, such as FL-20, FL-36, FL-36R, FL-40, FL-50, FL-50R and other brands flashes can work with Olympus TTL</p> <p>Panasonic flashes, such as DMW-FL360, DMW-FL580L, DMW-FL200L, DMW-FL360L and other brands flashes can work with Panasonic TTL</p>
FC-S3	<p>Sony cameras adopt Sony Auto-lock Accessory Shoe(non MI shoe), such as NEX-7, DSLR-A200, DSLR-A230, DSLR-A290, DSLR-A300, DSLR-A330, DSLR-A350, DSLR-A390, DSLR-A450, DSLR-A500, DSLR-A550, DSLR-A560, DSLR-A580, DSLR-A700, DSLR-A850, DSLR-A900, SLT-A33, SLT-A35, SLT-A37, SLT-A55, SLT-A57, SLT-A65, SLT-A77</p> <p>Minolta Maxxum series camera, such as A1, A2, A200, Z1, Z2, Z3, Z5, 7Hi, 7i, 7D, 5D</p>	<p>SONY flashes, such as HVL-F56AM, HVL-F58AM, HVL-F36AM, HVL-F42AM, HVL-F43AM, HVL-F60M</p> <p>Minolta flashes, such as 5600hs(D) 3600HS(D) 2500D 5400HS 5400xi 5200i and other Maxxum xi and i-series flashes</p>