

JJC *S Controller* Wired Remote Switch





Product Highlights

- Control Autofocus and Shutter Triggering
- Capture Images without Camera Shake
- Ideal for Taking Long Exposures
- Use for Continuous or Single Exposures
- No Battery Required-Powered by Camera

The JJC *S* series Remote Switch is a compact wired remote switch with a cable which replicates all functions of the camera's shutter release button. Handy for taking pictures of subjects that are difficult to approach, or to minimize vibration for close-ups and time exposure.

How to use

Press the button half-way in to autofocus

Depress the button fully to trigger the shutter

Press the button and slide it forward to lock for long exposures

Specification

Dimension: 105x34x23 mm

Cord length: 90cm

Weight: 30g

<i>Model</i>	<i>Replaces</i>	<i>Compatible</i>
S-C1	CANON RS-80N3	EOS 50D/5D/5D Mark III/7D/1D Mark II EOS 1D Mark II N/1D Mark III EOS 1D Mark IV/1D X/1Ds/1Ds Mark II EOS 1Ds Mark III
S-C2	CANON RS-60E3 PENTAX CS-205	EOS 60D/60Da/600D/550D/500D/G12/G1X EOS Digital Rebel XTi /T1i/T2/T2i/T3/Ti/X/XS/XSi
S-N1	NIKON MC-30	NIKON D3/D300/D300S/D3S/D3X/D4/D700/D800
S-N2	NIKON MC-DC1	NIKON D70S/D80
S-N3	NIKON MC-DC2	NIKON D3100/D3200/D5000/D5100/D7000/D90
S-P1	PANASONIC DMW-RSL1	DMC-FZ150/DMC-GX1/DMC-GH2/DMC-G3

		DMC-FZ100K/DMC-GF1/DMC-G1/DMC-G10
S-S1	SONY RM-S1AM MINOLTA RC-1000	A33/A55/A35/A900/A800/A560/A37/A57/A65/A77 A700/A550/A300/A500/A200/A350
S-F1	FUJIFILM RR-80	FUJIFILM FinePix HS30EXR/HS33EXR/HS25EXR FUJIFILM FinePix HS28EXR/HS20EXR/HS22EXR FUJIFILM FinePix S205EXR/S200EXR/S100FS/X-S1
S-O1	OLYMPUS RM-CB1	E1/E10/E20/E20N/E300*/E100RS/C8080*/C7070*/ C5060*/C2500L/E3/E5
S-O2	OLYMPUS RM-UC1	E-30/E-620/E-520/E-510/E-420/E-410/SP-510UZ SP-550UZ/SP-560UZ/SP-565UZ/SP-570UZ SP-590UZ/SP-810UZ/XZ-1/SZ-30MR/SZ-20 SZ-11/E-M5/E-P1/E-P2/E-PL2/E-P3/E-PL3/E-PM1

WWW.JJC.CC