



Model: JF-U1/JF-U2

Wireless Remote Control & Flash Trigger Kit

English Instruction Manual

Thank you for purchasing the JJC JF-U Series Wireless Remote Control & Flash Trigger Kit. For the best performance, please read the instruction carefully before using.



Transmitter



1 Shutter release / test button


4 Battery cover

2 Indicator light

5 ACC1 socket

3 Trigger point

Receiver

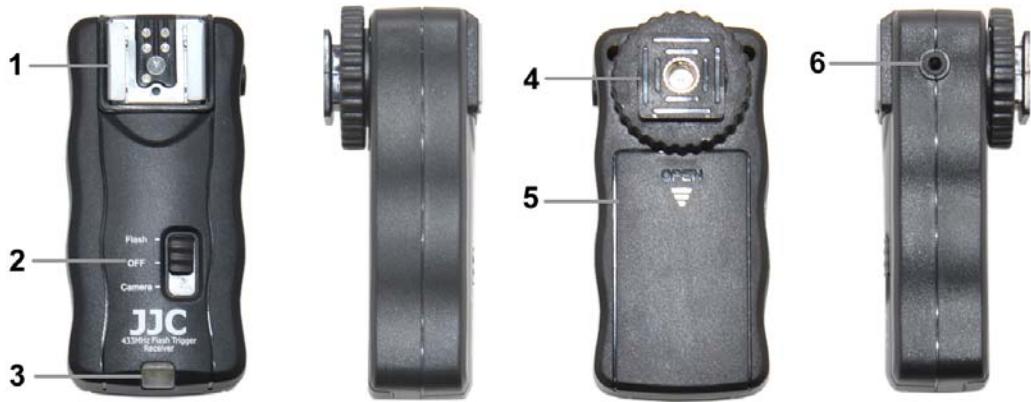

1 Hot shoe socket
4 hot shoe foot with screw

2 Mode switch
5 Battery cover

3 Indicator light
6 ACC2 socket

For Your Safety

-  Do not disassemble or modify
-  Keep Dry
-  Keep out of reach of children
-  Do not use in the presence of flammable gas
-  Do not expose to high temperatures

Feature

The JF-U series 3-in-1 Wireless Flash Trigger & Remote Control is a versatile, reliable remote control kit that will trigger off-camera flash units and studio lights from up to 30meters / 100 feet away.

The JF-U series also provides the convenience of a wireless camera shutter release, ideal for photographing wildlife, and also for macro and close-up photos, where the slightest camera movement can ruin a picture. Working on the 433MHz frequency gives you reduced radio interference and an extended range - you don't need to have line-of-sight alignment, either, as radio waves will pass through walls, windows and floors.

Note!

Since the JF-U does not transmit TTL settings, use a flash or light unit with full manual control is recommended. You need to set the power output manually.

Components Included

Remove the JF-U1/U2 kit from the box and confirm that you have all the items listed below.

JF-U1		JF-U2	
JF-U Transmitter	1pc	JF-U Transmitter	1pc
JF-U Receiver	1pc	JF-U Receiver	2pcs
Studio Light Cable	1pc	Studio Light Cable	2pcs
AAA Alkaline Battery	2pcs	AAA Alkaline Battery	4pcs
23A Battery	1pc	23A Battery	1pc
Manual	1pc	Manual	1pc

Specification

Wireless Frequency System: 433MHz

Operating Distance: up to 30meters

16 Channels Selectable

Receiver includes 1/4"-20 tripod mount

Sync: 1/250s

Channel: 16 channels

Transmitter power: 1 x 23A battery

Receiver power: 2 x AAA batteries

Function:

1. Wired Remote Control (for DSLR camera with remote socket)
2. Wireless Remote Control (for DSLR camera with remote socket)
3. Wireless Flash Trigger (for camera speedlight or studio light)

Note: To use function 1 and 2, you will need to purchase a JJC shutter release cable to fit your camera.

Weight:

Transmitter: 30g (without battery)

Receiver: 42g (without battery)

Dimension:

Transmitter: 62.6x39.2x27.1mm

Receiver: 79.9x37.8x33.2mm

Channel setting

- JF-U channel selector is inside the battery hatch.
- Follow the OPEN direction icon to slide out the battery door and set the channel.
- 16 channels selectable for Transmitter and Receiver.
- Please make sure Transmitter and Receiver are on the same channel.



Replacing Transmitter Batteries:



1



2



3



4

Replacing Receiver Batteries:



1



2



3



4

Wireless Flash Trigger:



1. Turn OFF the power of camera and receiver.
2. Mount the transmitter to the camera hot shoe socket.
3. Mount the flash on the receiver hot shoe socket.
4. If your flash or studio light does not have a hot shoe, connect the studio light cable to the flash or studio light to the ACC2 socket of the receiver.
5. Set the channel selector at same position on both the transmitter and the receiver.
When using multiple flash units, make sure set all receivers to the same channel.
6. Shift the Mode switch to the Flash option.
7. Press the test button on the transmitter.
8. If the transmitter and the receiver status lights are turning red and your flash trigger all of the settings are correct.

Wired Shutter Release:

Note: To use this function , you need to purchase a JJC shutter release cable to fit your camera.



1. Turn OFF the power of camera.
2. Connect the shutter release cable to the ACC1 socket of transmitter and remote socket of camera body.
3. Turn ON the power of camera.
4. Press the test button on the transmitter.
5. Half press for focus and full press for shutter release.

Wireless Shutter Release:

Note: To use this function , you need to purchase a JJC shutter release cable to fit your camera.



1. Turn OFF both power of camera and receiver.
2. Mount the receiver to the camera hot shoe socket. Connect the shutter release cable to the ACC2 socket of receiver and remote socket of camera body.
3. Set the channel selector at same position on both the transmitter and the receiver. To use multiple camera units, be sure to set all receivers to the same channel.
4. Turn the power of camera ON and shift the Mode switch to the Camera option.
5. Press the test button on the transmitter.
6. Half press for focus and full press for shutter release.
7. If the transmitter and the receiver status lights are turning red and your camera shutter release all of the settings are correct.

ONE YEAR UNCONDITIONAL GUARANTEE

If for any reason, this JJC product fails within ONE YEAR of the date of purchase, return this product to your JJC dealer or contact service@jjc.cc and it will be exchanged for you at no charge (not include shipping cost). JJC products are guaranteed for ONE FULL YEAR against defects in workmanship and materials. If at any time after one year, your JJC product fails under normal use, we invite you to return it to JJC for evaluation.

Shenzhen JinJiaCheng Photography Equipment Co., Ltd.

Office TEL: +86 755 82359938 / 82369905 / 82146289

Office FAX: +86 755 82146183

Website: www.jjc.cc

Email: sales@jjc.cc / service@jjc.cc

Address: Main Building, Changfengyuan, Chunfeng Rd, Luohu District, Shenzhen, Guangdong, China

